

**FULCRUM**<sup>®</sup>

**MAINTENANCE CARDS  
WHEELS – ROAD**





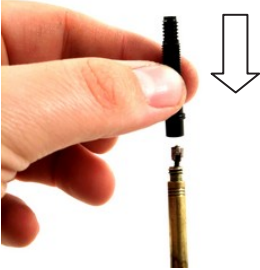
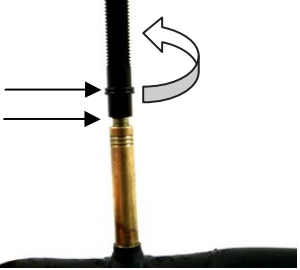
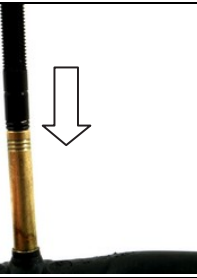


**FEMALE VALVE  
EXTENSION ASSEMBLY**

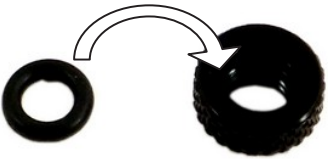
# MAINTENANCE CARDS

GROUP	TYPE	OPERATION	REVISION	DESCRIPTION
ROAD WHEELS	CONE / CUP MECHANISM	013	04/ 2020	FEMALE VALVE EXTENSION ASSEMBLY

**PRODUCTS ON WHICH THE PROCEDURE SHOULD BE APPLIED**

Check what extension you need according to the length of the valve and height of the rim profile.  
 Since various types of extension are available, identify the right code in the Spare Parts Catalogue on this site or contact a Fulcrum Service Centre.

		
<p><b>1</b></p> <p>In case of valves with non-removable valve proceed as follows.</p>	<p><b>2</b></p> <p>Fully loosen the nut of the valve.</p>	<p><b>3</b></p>
		
<p><b>4</b></p> <p>Fix the ring nut using some pliers so that it is always in an open position.</p>	<p><b>5</b></p> <p>Get an extension of an appropriate size two to the profile of the rim in use.</p>	<p><b>6</b></p> <p>Tighten the extension on the valve by two turns</p>
		
<p><b>7</b></p> <p>Let the OR rings (2 pcs) that are inserted inside the extension fall into the housing of the valve.</p>	<p><b>8</b></p> <p>Fix the extension using the designated wrench.</p>	<p><b>9</b></p> <p>Tighten the valve.</p>


<p><b>10</b></p> <p>Fasten the valve to the rim using the designated knurled fixing ring nut. Insert the designated OR ring inside the ring nut before use.</p>