



OFF-ROAD

TECHNICAL MANUAL 2013

MAINTENANCE

 **ATTENTION!**

The operations described below require specific competences, experience and adequate equipment. This is why this section of the technical manual is reserved only and exclusively to specialised personnel (Service Center and specialised mechanics).

MAINTENANCE

OPERATION INDEX

001	SPOKE REPLACEMENT RED CARBON FRONT / REAR WHEEL NON-DRIVE SIDE	10
002	SPOKE REPLACEMENT RED CARBON FRONT / REAR WHEEL DRIVE SIDE	12
003	SPOKE REPLACEMENT RED METAL 3 / RED FIRE / RED ZONE / RED HEAT FRONT AND REAR WHEEL	15
004	SPOKE REPLACEMENT RED METAL 1XL / RED ZONE XLR FRONT AND REAR WHEEL	17
005	SPOKE REPLACEMENT RED METAL O XRP FRONT AND REAR WHEEL	19
006	SPOKE REPLACEMENT RED POWER XL/SL/RED HEAT FRONT AND REAR WHEEL NON-DRIVE SIDE	21
007	CURVED HEAD SPOKE REPLACEMENT RED POWER FRONT AND REAR WHEEL	22
008	FREEWHEEL BODY DISASSEMBLY AND ASSEMBLY REAR WHEEL WITH CONE/CUP	23
009	HUB DISASSEMBLY AND ASSEMBLY FRONT AND REAR WHEEL WITH CONE/CUP	24
010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
011	INSTALLATION OF THE QR/THRU-AXLE 15 mm ADAPTER KIT	30
012	INSTALLATION OF THE SYNTACE X-12 (O.L.D. 142mm) ADAPTER KIT	31
013	INSTALLATION OF THE ADAPTER KIT THRU-AXLE 12mm 142 -> 135mm	32
014	FREEWHEEL BODY PAWL REPLACEMENT	33

MAINTENANCE

WHEELS INDEX

RED CARBON

001	SPOKE REPLACEMENT RED CARBON FRONT / REAR WHEEL NON-DRIVE SIDE	10
002	SPOKE REPLACEMENT RED CARBON FRONT / REAR WHEEL DRIVE SIDE	12
008	FREEWHEEL BODY DISASSEMBLY AND ASSEMBLY REAR WHEEL WITH CONE/CUP	23
009	HUB DISASSEMBLY AND ASSEMBLY FRONT AND REAR WHEEL WITH CONE/CUP	24
014	FREEWHEEL BODY PAWL REPLACEMENT	33

RED METAL 0 XRP

005	SPOKE REPLACEMENT RED METAL 0 XRP FRONT AND REAR WHEEL	19
008	FREEWHEEL BODY DISASSEMBLY AND ASSEMBLY REAR WHEEL WITH CONE/CUP	23
009	HUB DISASSEMBLY AND ASSEMBLY FRONT AND REAR WHEEL WITH CONE/CUP	24
011	INSTALLATION OF THE QR/THRU-AXLE 15 mm ADAPTER KIT	30
012	INSTALLATION OF THE SYNTACE X-12 (O.L.D. 142mm) ADAPTER KIT	31
014	FREEWHEEL BODY PAWL REPLACEMENT	33

RED METAL 1 XL

004	SPOKE REPLACEMENT RED METAL 1XL / RED ZONE XLR FRONT AND REAR WHEEL	17
010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
011	INSTALLATION OF THE QR/THRU-AXLE 15 mm ADAPTER KIT	30
012	INSTALLATION OF THE SYNTACE X-12 (O.L.D. 142mm) ADAPTER KIT	31
014	FREEWHEEL BODY PAWL REPLACEMENT	33

RED METAL 3

003	SPOKE REPLACEMENT RED METAL 3 / RED FIRE / RED ZONE / RED HEAT FRONT AND REAR WHEEL	15
010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
011	INSTALLATION OF THE QR/THRU-AXLE 15 mm ADAPTER KIT	30
012	INSTALLATION OF THE SYNTACE X-12 (O.L.D. 142mm) ADAPTER KIT	31
014	FREEWHEEL BODY PAWL REPLACEMENT	33

RED POWER XL

003	SPOKE REPLACEMENT RED METAL 3 / RED FIRE / RED ZONE / RED HEAT FRONT AND REAR WHEEL	15
-----	---	----

MAINTENANCE

WHEELS INDEX

RED POWER XL

006	SPOKE REPLACEMENT RED POWER XL/SL/RED HEAT FRONT AND REAR WHEEL NON-DRIVE SIDE	21
010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
011	INSTALLATION OF THE QR/THRU-AXLE 15 mm ADAPTER KIT	30
013	INSTALLATION OF THE ADAPTER KIT THRU-AXLE 12mm 142 -> 135mm	32
014	FREEWHEEL BODY PAWL REPLACEMENT	33

RED POWER SL

003	SPOKE REPLACEMENT RED METAL 3 / RED FIRE / RED ZONE / RED HEAT FRONT AND REAR WHEEL	15
006	SPOKE REPLACEMENT RED POWER XL/SL/RED HEAT FRONT AND REAR WHEEL NON-DRIVE SIDE	21
010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
014	FREEWHEEL BODY PAWL REPLACEMENT	33
007	CURVED HEAD SPOKE REPLACEMENT RED POWER FRONT AND REAR WHEEL	22

RED POWER

010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
014	FREEWHEEL BODY PAWL REPLACEMENT	33

RED METAL 29 XL

004	SPOKE REPLACEMENT RED METAL 1XL / RED ZONE XLR FRONT AND REAR WHEEL	17
010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
011	INSTALLATION OF THE QR/THRU-AXLE 15 mm ADAPTER KIT	30
012	INSTALLATION OF THE SYNTACE X-12 (O.L.D. 142mm) ADAPTER KIT	31
014	FREEWHEEL BODY PAWL REPLACEMENT	33

RED POWER 29 XL

003	SPOKE REPLACEMENT RED METAL 3 / RED FIRE / RED ZONE / RED HEAT FRONT AND REAR WHEEL	15
006	SPOKE REPLACEMENT RED POWER XL/SL/RED HEAT FRONT AND REAR WHEEL NON-DRIVE SIDE	21
010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
011	INSTALLATION OF THE QR/THRU-AXLE 15 mm ADAPTER KIT	30
013	INSTALLATION OF THE ADAPTER KIT THRU-AXLE 12mm 142 -> 135mm	32

MAINTENANCE

WHEELS INDEX

RED POWER 29 XL

014	FREEWHEEL BODY PAWL REPLACEMENT	33
-----	---------------------------------	----

RED POWER 29 SL

003	SPOKE REPLACEMENT RED METAL 3 / RED FIRE / RED ZONE / RED HEAT FRONT AND REAR WHEEL	15
-----	---	----

006	SPOKE REPLACEMENT RED POWER XL/SL/RED HEAT FRONT AND REAR WHEEL NON-DRIVE SIDE	21
-----	--	----

010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
-----	--	----

014	FREEWHEEL BODY PAWL REPLACEMENT	33
-----	---------------------------------	----

RED ZONE XLR

004	SPOKE REPLACEMENT RED METAL 1XL / RED ZONE XLR FRONT AND REAR WHEEL XLR	17
-----	---	----

010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
-----	--	----

014	FREEWHEEL BODY PAWL REPLACEMENT	33
-----	---------------------------------	----

RED ZONE

003	SPOKE REPLACEMENT RED METAL 3 / RED FIRE / RED ZONE / RED HEAT FRONT AND REAR WHEEL	15
-----	---	----

010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
-----	--	----

014	FREEWHEEL BODY PAWL REPLACEMENT	33
-----	---------------------------------	----

RED FIRE

003	SPOKE REPLACEMENT RED METAL 3 / RED FIRE / RED ZONE / RED HEAT FRONT AND REAR WHEEL	15
-----	---	----

010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
-----	--	----

014	FREEWHEEL BODY PAWL REPLACEMENT	33
-----	---------------------------------	----

RED HEAT

003	SPOKE REPLACEMENT RED METAL 3 / RED FIRE / RED ZONE / RED HEAT FRONT AND REAR WHEEL	15
-----	---	----

006	SPOKE REPLACEMENT RED POWER XL/SL/RED HEAT FRONT AND REAR WHEEL NON-DRIVE SIDE	21
-----	--	----

010	HUB DISASSEMBLY FRONT AND REAR WHEEL WITH INDUSTRIAL BEARING	28
-----	--	----

014	FREEWHEEL BODY PAWL REPLACEMENT	33
-----	---------------------------------	----