

MAINTENANCE CARDS

GROUP		TYPE			OPERATION	REVISION	DESCRIPTION		
ROAD WHEELS		BEARINGS MOVEMENT			015	03/ 2019	REPLACING THE SPOKES		
PRODUCTS ON WHICH THE PROCEDURE SHOULD BE APPLIED									
RACING 5	RACING 5 DB	RACING 5 CX	RACING 7	RACING 7 LG	RACING 7 CX	RACING QUATTRO	RACING QUATTRO LG	RACING QUATTRO CARBON	RACING QUATTRO CARBON DB
RACING SPORT									

<p>1</p> <p>Remove the cover of the hub with a screwdriver.</p>	<p>2</p> <p>Conduct the operation on both sides of the hub.</p>	<p>3</p> <p>With a 5mm hex screwdriver loosen the nipple of the spoke you need to replace from inside the rim.</p>

<p>4</p> <p>Remove the spoke from the flange of the hub.</p>	<p>5</p> <p>Insert the new spoke on the flange of the hub. Make sure the head of the spoke fully engages into place.</p>	<p>6</p> <p>Insert the threaded part of the spoke inside the hole of the rim.</p>

<p>7</p> <p>If the nipples are damaged, replace them.</p>	<p>8</p> <p>Insert the nipple in the screwdriver.</p>	<p>9</p> <p>Tighten the desired nipple until you tension the spoke.</p>

<p>10</p> <p>Insert the cover in the hub.</p>	<p>11</p> <p>If necessary, adjust the clearance of the wheel. ► To adjust the axial/radial clearance see OPERATION 006.</p>