






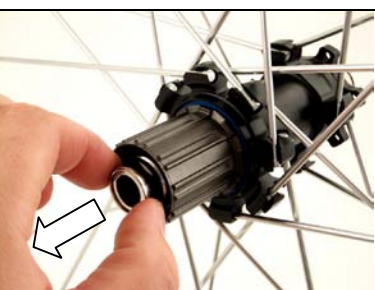
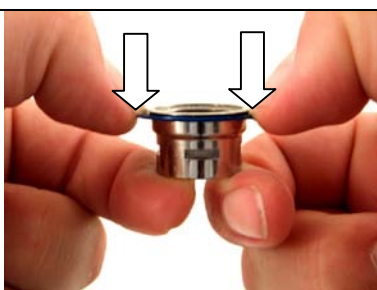

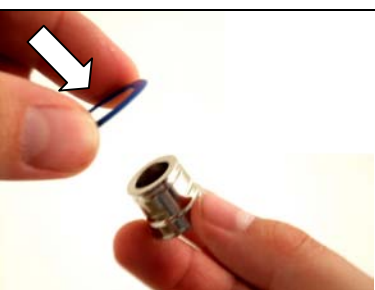



MAINTENANCE

GROUP	TYPE	OPERATION	REVISION	DESCRIPTION
MTB WHEELS	ALL	012	0/2011	INSTALLATION OF THE SYNTACE X-12 (O.L.D.142mm) ADAPTER KIT
PRODUCTS ON WHICH THE PROCEDURE IS APPLIED				
				
Red Metal 0 XRP™	Red Metal 1 XL™	Red Metal 3™		

		
<p>1</p> <p>Take out the KIT.</p>	<p>2</p> <p>Remove the end cap of the hub from the side of the disk brake.</p>	<p>3</p> <p>Insert the adapter with shortest length on the disk brake side.</p>

		
<p>4</p> <p>Rotate the hub from the opposite side.</p>	<p>5</p> <p>Remove the end cap of the hub from the side of the sprocket holder body.</p>	<p>6</p> <p>Remove the seal from the cap by pressing on two points at the same time.</p>

		
<p>7</p> <p>Check that the seal is in good condition.</p>	<p>8</p> <p>Insert the seal on the adapter with the longest length. The black shielded part faces towards the inside of the hub body.</p>	<p>9</p> <p>Fit the adapter on the hub axle.</p>